

NEC SL1100 Setting Time & Date

These instructions may not be compatible with all configurations or software revisions.

To set the system time from the operator phone:

1. Press Speaker key.
2. Dial 7 2 8.
3. Dial two digits for the hour (24-hour clock, 13 = 1:00 PM).
4. Dial two digits for the minutes (00–59).
5. Press Speaker key to hang up.